


TM40 User Guide - Digiplex EVO Systems

DIGIPLEX
EVO



P ▲ R ▼ D O X™

Main Screen

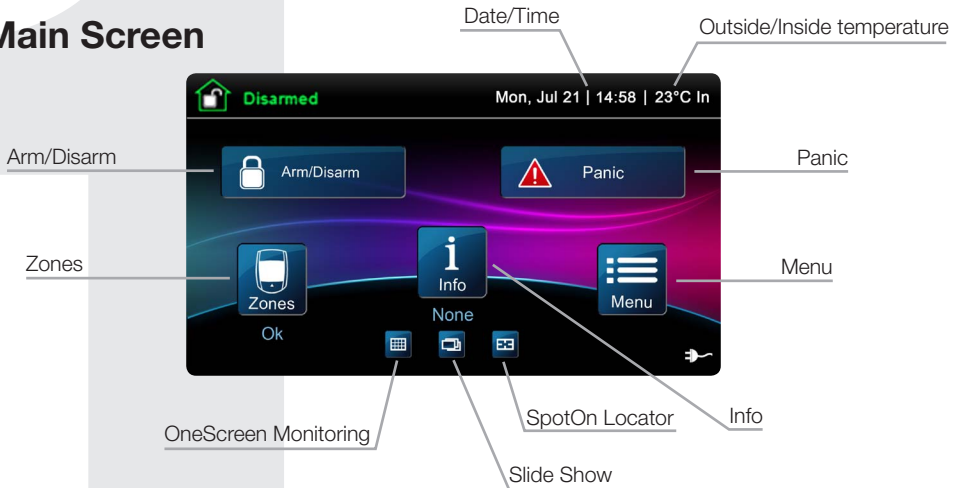

Arming/Disarming your System

Arming/Disarming your system:


1. Press **Arm/Disarm** button from main screen.
2. Select Arming method.
3. Enter code (4 to 6 digits).



Menu

For menu options press the Menu button and follow the on-screen prompts. Menu options include:

- Security Functions
- User Codes
- Control Devices
- Add-on
- System Settings
- Personalize
- Advanced

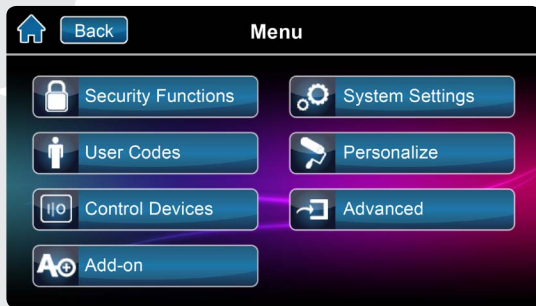

Entering User Programming

Enter user programming:


1. Press **Menu**.
2. Press **User Codes**.
3. Enter Master Code.



Programming a New User

Programming a new user:


1. Press the **Add** button to add a user.
2. Modify Label or press **Skip**.
3. Enter new user code and press **Next**.
4. Confirm user code by entering a 2nd time then press **Next**.
5. Option to learn remote in, press button on remote or press **Skip**.
6. Enter access card number or press **Skip**.
7. User Settings or press **Done**.
8. User is now valid.

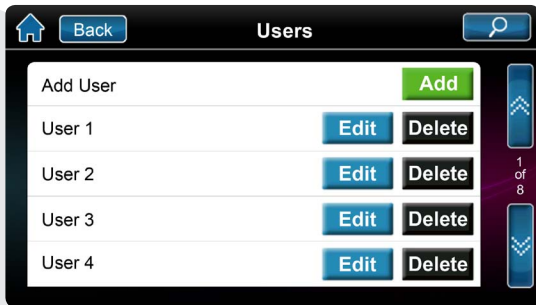

Settings Screen


Setting screen accessed through Menu then System Settings.
Settings include:

- Time & Date
- Display Setting
- Clean Screen
- Volume/Mute
- Permissions

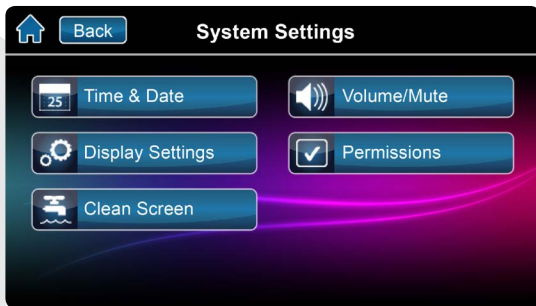


OneScreen Monitoring™

To Access OneScreen Monitoring*:


1. Press the  button.
2. View open/closed zones (an open door means a zone is open).
3. Press on the **Settings** button (top right corner) to access more options.

*OneScreen Monitoring is an optional feature.
Please contact your installer for more information.

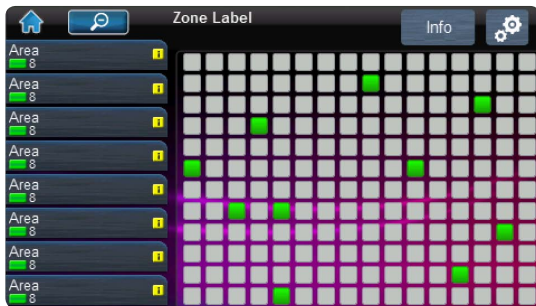

SpotOn Alarm Locator™

To Access SpotOn Locator*:


1. Press the  button.
2. Follow the onscreen instructions on how to upload photos, images, or schematics for your personalized floor plans.
3. Follow the onscreen instructions on how to add/move/delete zones from your floor plan.

*SpotOn Locator is an optional feature. Please contact your installer for more information.



SlideShow

To Access SlideShow:

1. Press the  button to view the default slideshow.
2. Press on **Menu**, **Personalize** then **SlideShow** to access more options.



microSD Card

To remove/replace the microSD:

1. Push down on the microSD card to unlock.
2. Gently pull out the microSD card to remove.
If desired, replace card.



Notes

Notes

Warranty: For complete warranty information on this product, please refer to the Limited Warranty Statement found on the Web site www.paradox.com/ terms. Your use of the Paradox product signifies your acceptance of all warranty terms and conditions. One or more of the following US patents may apply: 7046142, 6215399, 6111256, 6104319, 5920259, 5886632, 5721542, 5287111, and RE39406 and other pending patents may apply. Canadian and international patents may also apply. © 2013 Paradox Ltd. All rights reserved. Specifications may change without prior notice. www.paradox.com

